



INTERNATIONAL OIL FIELD SERVICES b.v.



FLOAT VALVES



Our Float valves are easy to install. Simply lubricate the side seal rubbers and slide the float valve into the cavity in the float body or drilled out drill collar.

Model F - Plunger type with viton seals

1R
1F 2R
2F 3R
3F
3 1/2F
4R
5R
5F 6R

Model G - Full flow flapper type with viton seals

2F 3R
3F
4R
5R
5F 6R

INTERNATIONAL OIL FIELD SERVICES b.v.

Industrieweg 39
7761 PV Schoonebeek

Tel.: 00-31-524-533 477

Fax: 00-31-524-533 475

